

ADMINISTRATION
MAINTENANCE
GUIDE



go print happy

PHOTO PRINTING KIOSK




ENTER MAINTENANCE MODE

Tap the screen corners in this order to access the maintenance screen.

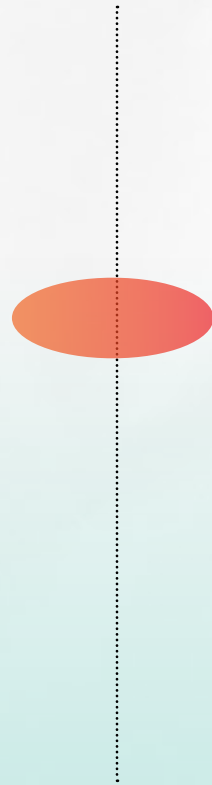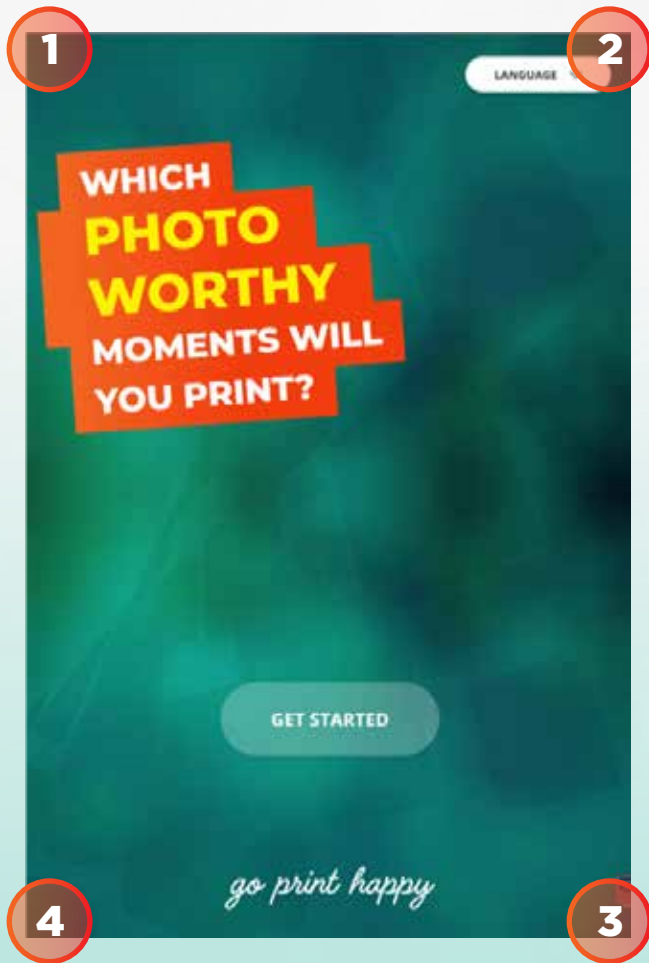


ENTER MAINTENANCE MODE

Enter the pin code: 1 2 3 4

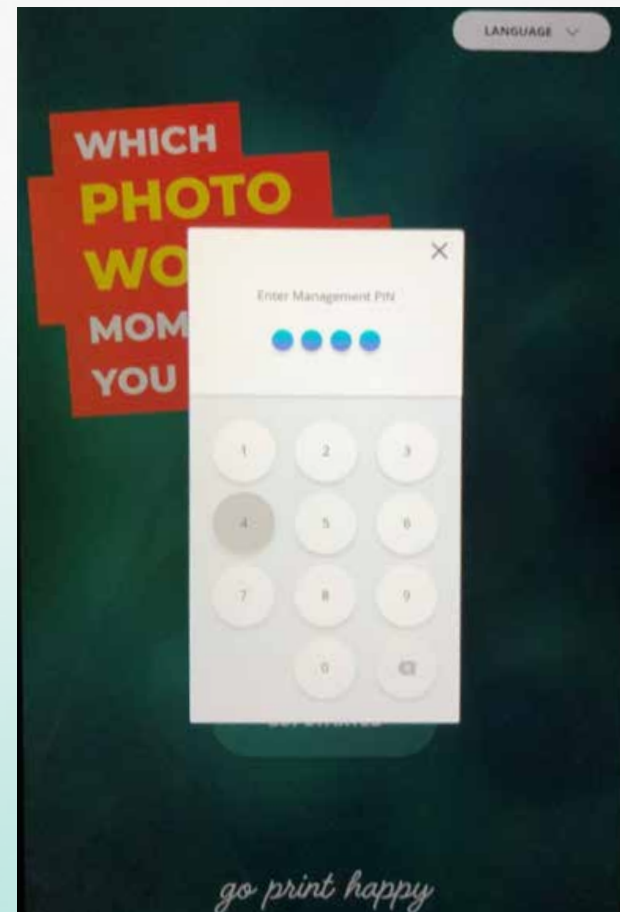


ENTER MAINTENANCE MODE

The kiosk configuration screen will pop up. Tap on “Maintenance”.

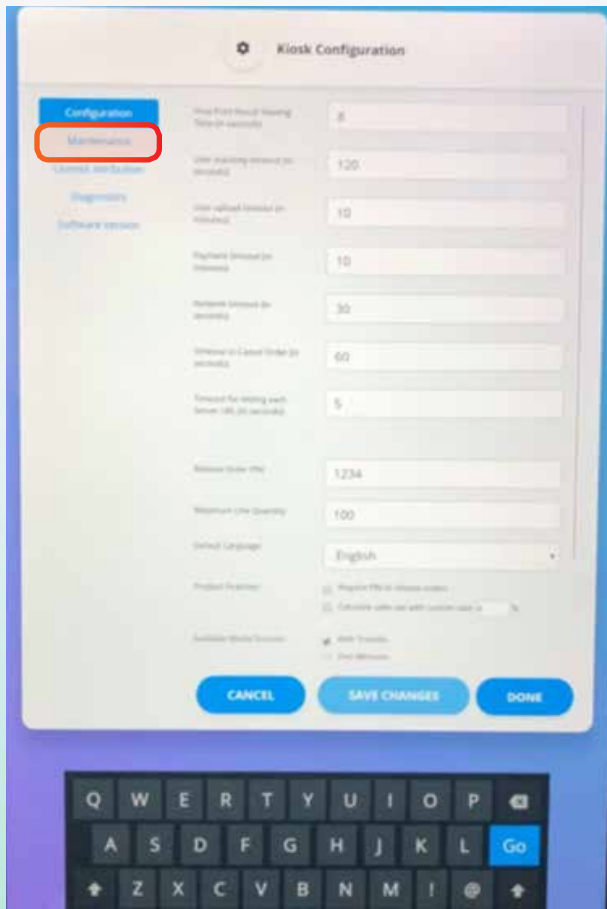


SET UP YOUR NETWORK WIFI

On the maintenance screen, tap on “Set Up Your Network”.

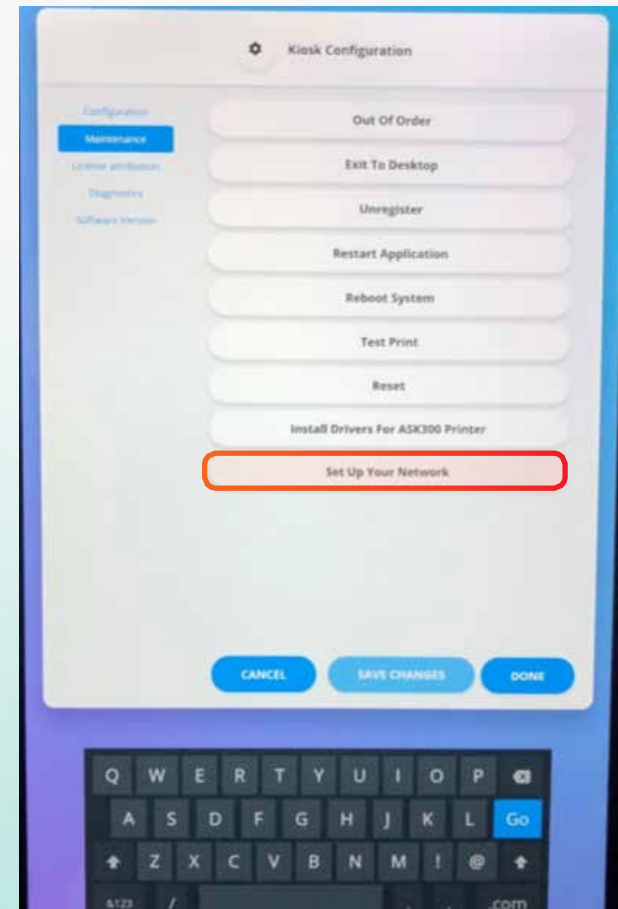


SET UP YOUR NETWORK WIFI

Tap the Wifi tab.

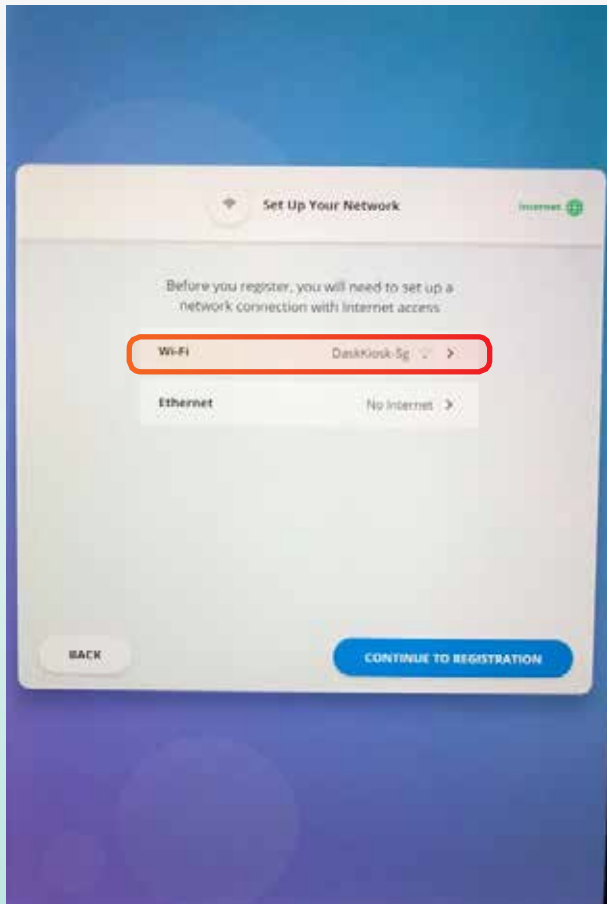


SET UP YOUR NETWORK WIFI

Select your desired network and tap “Continue to registration”.

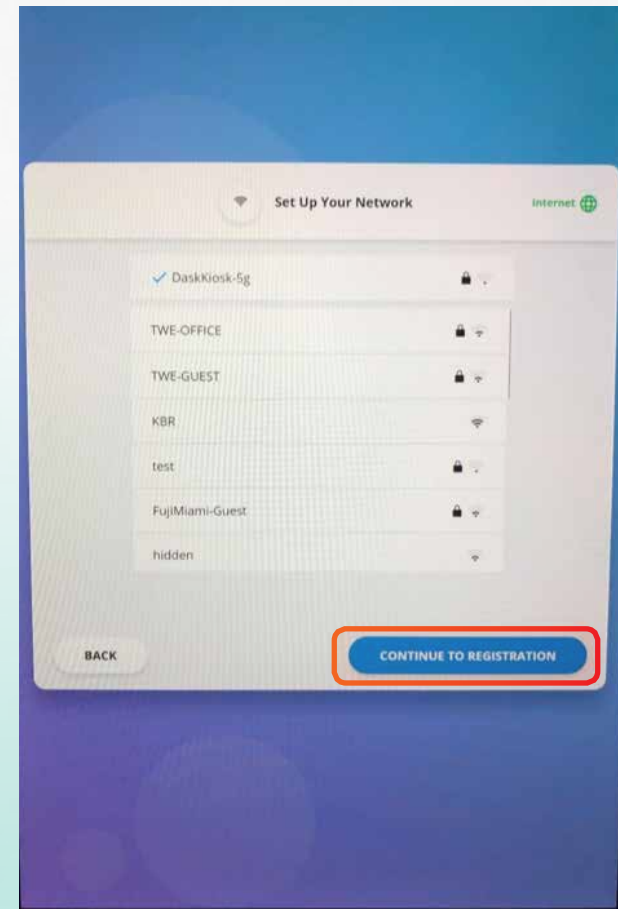


LAUNCH KIOSK

Confirm this is the store/customer it is registered to and click “Launch Kiosk”.

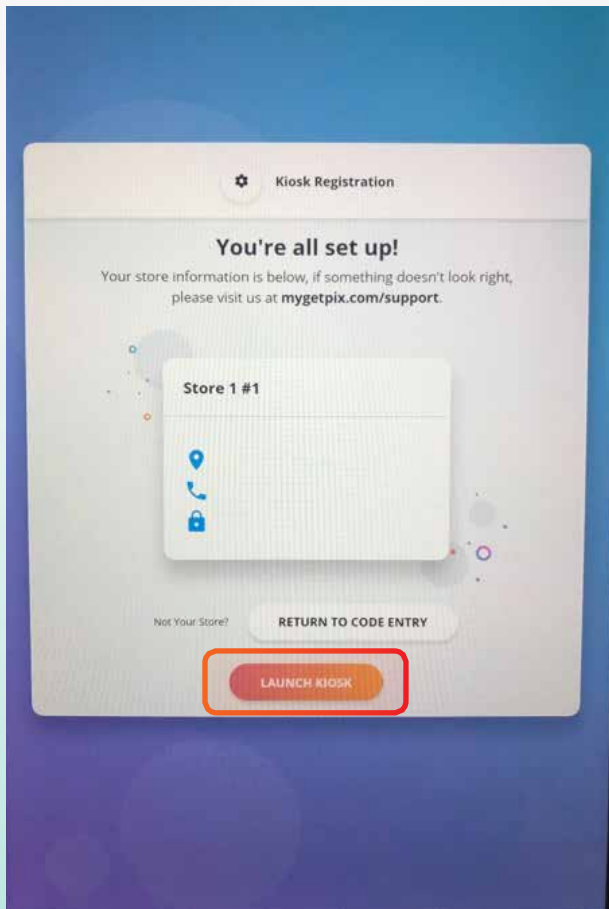

SOFTWARE VERSION

To check your software version, tap “Software Version”.

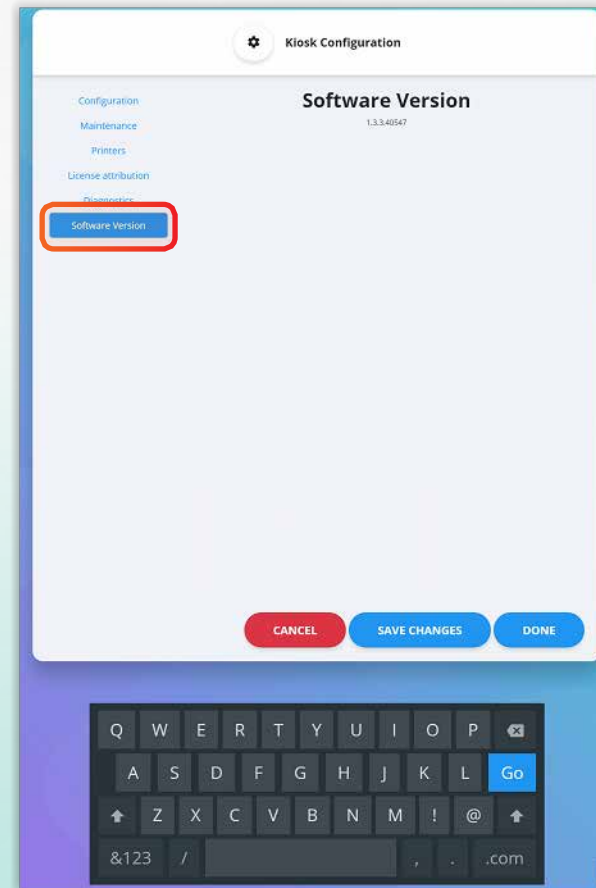


KIOSK CONFIGURATION

The Kiosk configuration screen gives you the ability to customize your kiosk software to suit your business and workflow needs. It's important not to change default setting for Upload Server URL.


Other default are shown.

The State Sales Tax is set to the default for the state your kiosk is registered for.

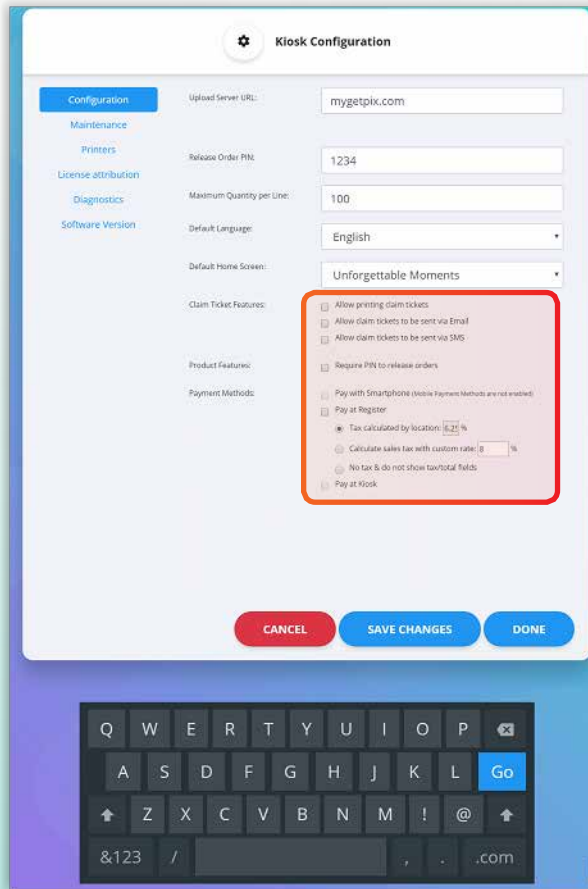


CLAIM TICKET OPTIONS

To allow claim tickets to be printed on the printer with order check the box Allow printing claim tickets.

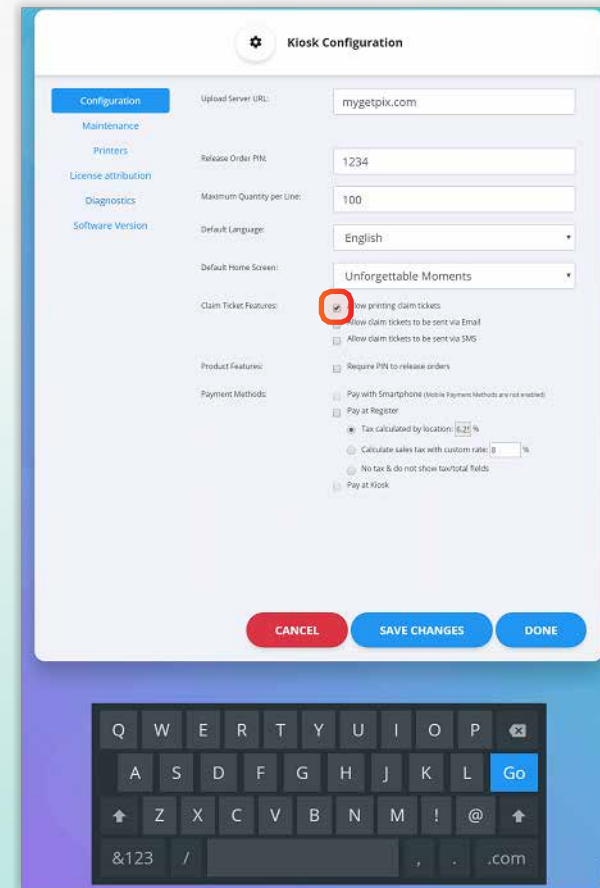


CLAIM TICKET OPTIONS

You may also choose to have claim tickets be sent via email.

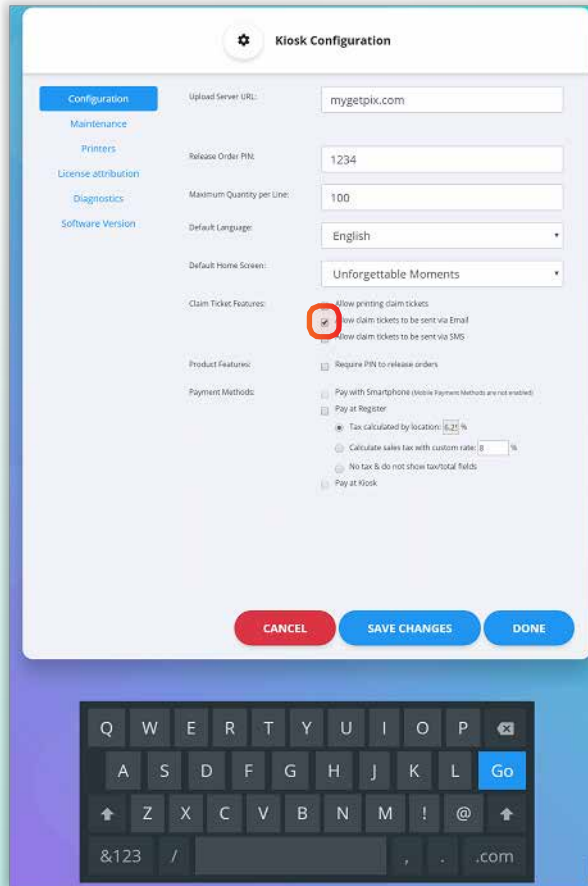

CLAIM TICKET OPTIONS


You may also choose to have claim tickets be sent via text message.

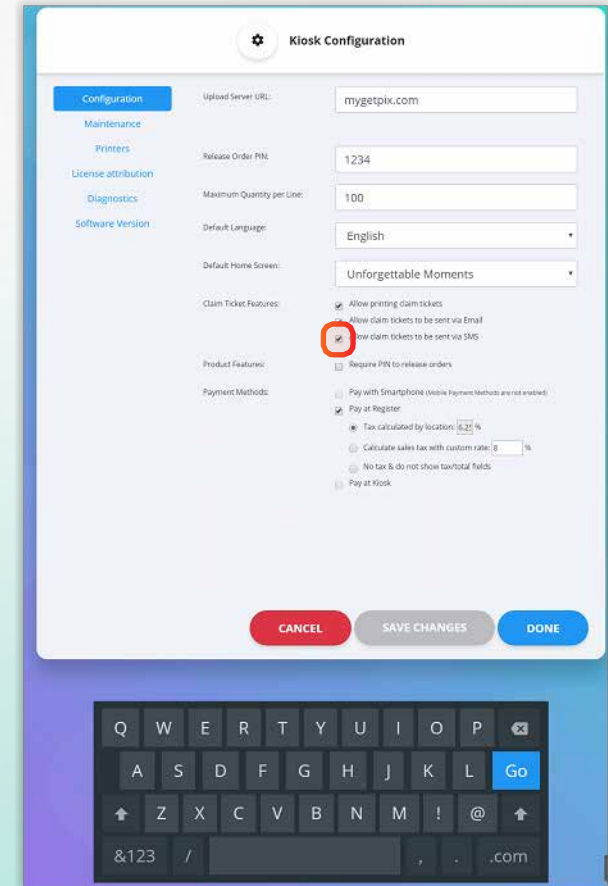

RELEASE PIN

If you desire to hold orders until payment is made check the box require PIN to release orders.


The release order PIN number may be set to a custom number in the Release Order PIN field.

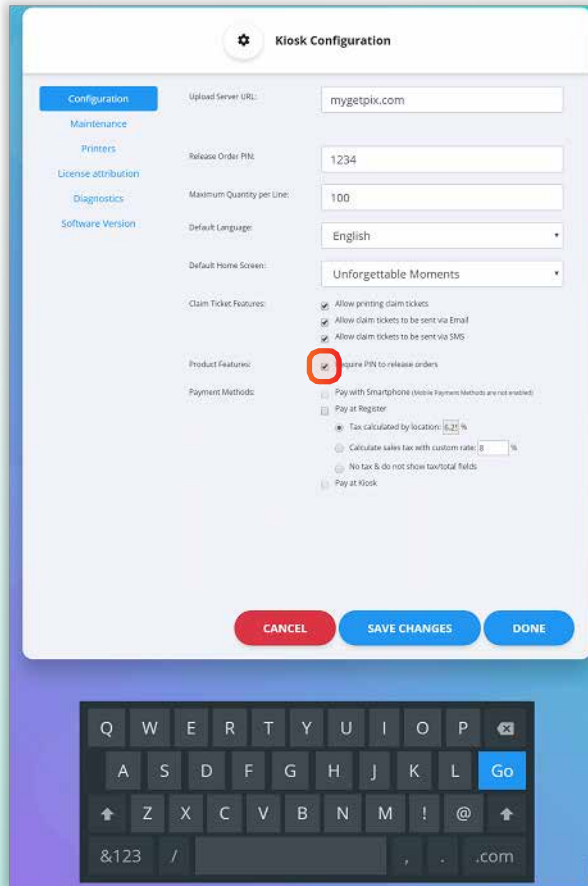

PAYMENT OPTIONS


Payment options are configurable to offer more than one option for payments.

To set up Pay with Smart Phone only check just the Pay with Smart Phone box.

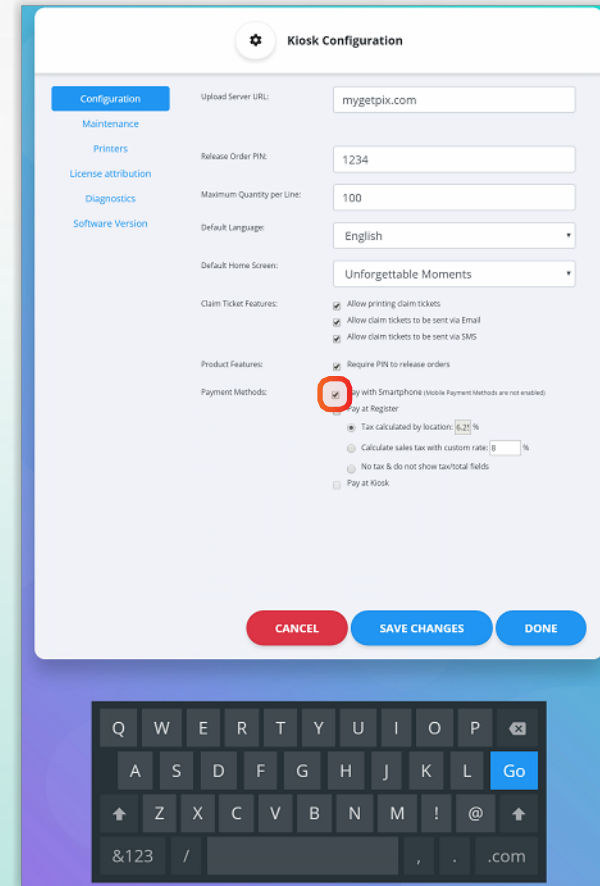


PAYMENT OPTIONS

To set up Pay with Smart Phone you first have to set up a payment merchant account with the link provided by Fujifilm. Register also check Pay At Register box.

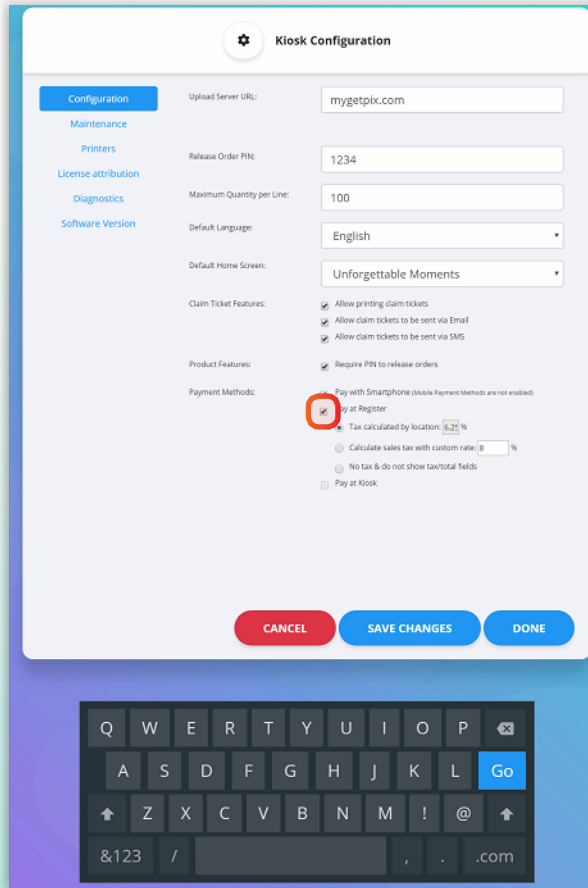

HOME SCREEN THEME

Kiosk Home Screen themes are also configurable. Select the default Home Screen from the selections in the drop down.

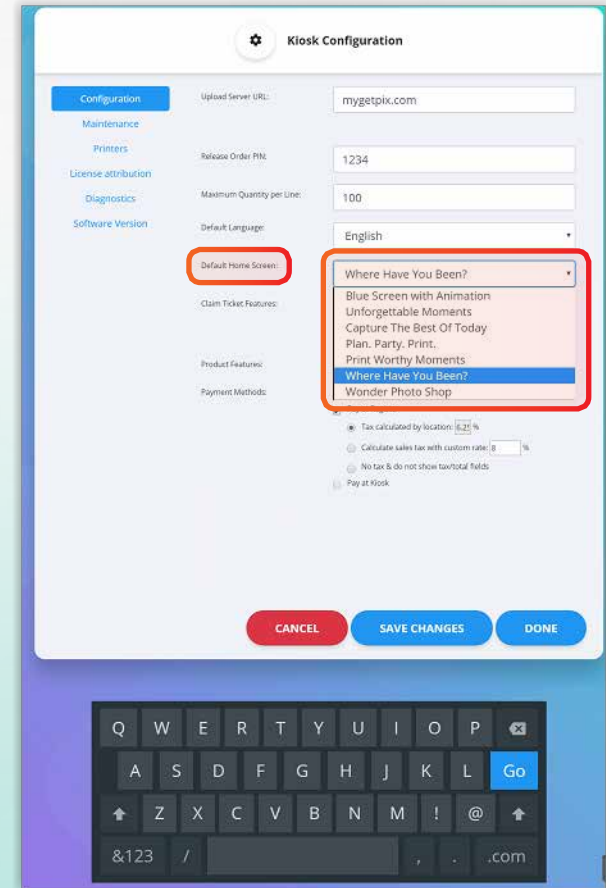

The Fujifilm logo is centered on a white rectangular background. The word "FUJIFILM" is written in a bold, black, sans-serif font. A small red vertical bar is positioned between the "i" and "F" in "FILM".

FUJIFILM

**UNFORGET
MOMENTS**

FUJIFILM



NO PRINTS
ONLY

WHICH
**PHOTO
WORTHY**
MOMENTS WILL
YOU PRINT?

GET STARTED